

Left Ser manual supplemental instruction

We do the further improvement for better disassembling. Here are some changes on user manual:

Install the LED

- 1. Remove the four screws (2 pins) from the magazine
- 2. Disassemble the magazine cover into upper and lower part. Take out the inner case.
- 3. Install the LED box into the magazine inner case as shown.
- 4. Assemble the magazine and tighten the four screws (2 pins) to finish.

Caution: <u>A Non-pellet Alert Function</u>

A Non-pellet Alert Function is available for this rifle. Remove the empty magazine before return the bolt handle is a must. Return the bolt handle furiously may damage the gun.